

CDR-3300 Series

TO CREATE A BACKUP

- 1) Left click on screen and log into the DVR if you haven't already (default PW: 0000)
- 2) Plug in your USB thumb drive – wait 10sec before continuing
- 3) Right click anywhere on screen, or push Menu button on front of unit to bring up the onscreen MENU BAR
- 4) Left click on SEARCH. On right side of search screen, left click Calendar Search (easiest searching method)
- 5) Find & write down date, time, & camera(s) of event you wish to back up
- 6) Exit (X) out of calendar and SEARCH to go back to live view
- 7) Right click again on screen and left click on ARCHIVE within the menu bar
- 8) In Archive screen make sure your USB device is listed in drop-down box. Example: USB(LEXAR JUMPDRIVE)
- 9) By default, all channels are selected. * Unselect ALL if you wish to designate what cameras to back up individually * If you select AVI instead of our proprietary format, you can only select one camera (AVI is easiest to playback)
- 10) Select the FROM time by left clicking the time next to it. Do the same for the TO time.
- 11) Select BURN – The DVR will now check the backup size and compare it with the free space on the USB device. If there is not enough space on your USB device you will be prompted with a message and you should select less time to record or obtain a large storage device.
- 12) If enough space is found on the USB device select APPLY to the question “Do you want to backup?”
- 13) The DVR will now start placing the video data to the USB device.
- 14) Once Backup is complete click on APPLY and remove the USB device.
- 15) Click on CLOSE if you are finished making backups

Playback on PC using ‘AVI X Backup Player’ from 3300 Utilities Disk, or you can download from direct link below.

www.crestelectronics.com/download/software